


BEFORE INSTALLING:

Read directions thoroughly. Check that all components are included. Prepare a soft non-scratchable surface on which to work.

NOTE:

The bottom of each of the drawer sides is identified by the horizontal dado (groove) that is cut into each piece.


TOOLS NEEDED:

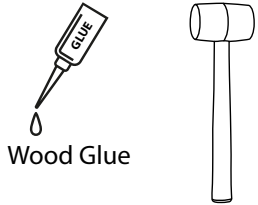


Wood Glue

Rubber Mallet


PARTS:

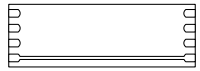


Front

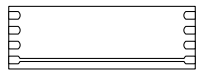


Back (for ball bearing slides)

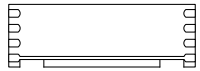

Back (for undermount slides)

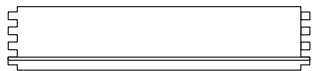


Sides (2)



Bottom

1

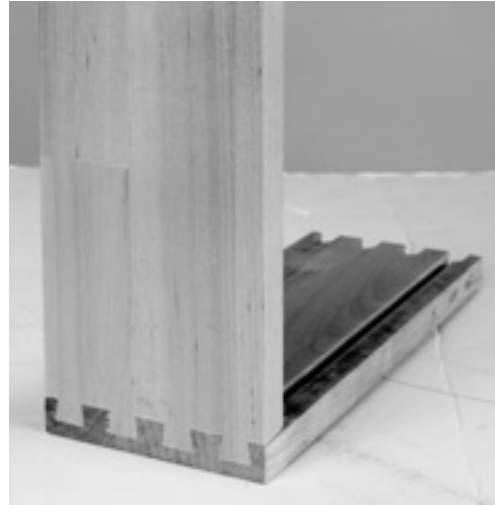

Place the drawer front face down and apply a small bead of wood glue in each mortise. Align the dovetails with one of the drawer sides. Carefully tap the drawer side with a rubber mallet until the dovetail is flush.

2




Apply a small bead of glue in the dado groove in both the side and front piece. Align and slide the drawer bottom into place.

3



Apply a small bead of wood glue in each mortise of the back piece. Tap the drawer back into place making sure the bottom panel seats properly into the dado.

4

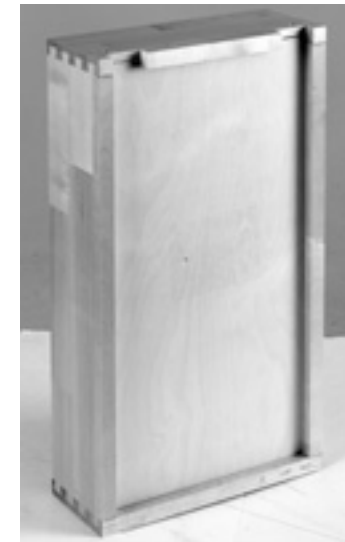

Position and tap the remaining drawer side into place.